



Adjustable Arms
Pressing up on lever located on stem underneath armrest will adjust arms.



Adjustable Tilt Tension
Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.



Seat Height Adjustment
Lift lever under right side of seat to adjust seat height.