



**Arm-pad Swivel Adjustment**  
Manually move the arm-pad to swivel.



**Armrest Up & Down Adjustment**  
Press button located underneath the arm-pad and lift or press down to adjust armrests.



**Seat Slider Adjustment**  
Lift rear button on left under seat to adjust seat slider.



**Backrest Tilt Angle Adjustment**  
Press front button on left under seat to adjust the tilt angle of backrest. Lift button to lock position.



**Seat Height Adjustment**  
Lift button on right side of seat to adjust height.



**Ratchet Back Height Adjustment**  
Lift frame of backrest to adjust height.



**Backrest Tilt Tension Adjustment**  
Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.