

# SEATING USER GUIDE

## ELEVATION SERIES: OPS-B14 IMPACT



### ARMREST UP & DOWN ADJUSTMENT

Press button located underneath the arm-pad and lift or press down to adjust arm rests. Arm rests also rotate left/right.



### SEAT HEIGHT ADJUSTMENT

Lift button on right under seat to adjust height.



### SEAT DEPTH ADJUSTMENT

Lift second button on right under seat to adjust seat depth.



### LUMBAR SUPPORT ADJUSTMENT

Pull handle on back of chair to adjust lumbar support up and down.



### BACKREST TILT ANGLE ADJUSTMENT

Press button under left side of seat to adjust backrest tilt. Lift button to lock position.



### BACKREST TILT TENSION ADJUSTMENT

Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.

# SEATING USER GUIDE

## ELEVATION SERIES: **OPS-B14 IMPACT**

