

Panel Glass Holder (PGH) Installation

WARNING! PGH screens must be tightened by hand. Plexiglass and glass are subject to cracking and breaking if power tools are used.



PGH Installed on top of panel




Installation Instructions

1. Install each PGH- panel glass holder 5" from the edge of the panel.
2. Drill pilot hole 1/2" diameter and 1" deep.
3. Drill top cap for T-Nut flush mount 7/8" diameter into the top cap only.
4. Insert T-nut. Tap in.
5. Insert bolt and bracket. Tighten.
6. Loosen allen screw on bracket.
7. Insert glass or fabric screen and tighten.

PGH Bracket

- 24"W-48"W Panels receive 2 brackets
- 60"W and 72"W panels receive 4 brackets

Start of Mullion

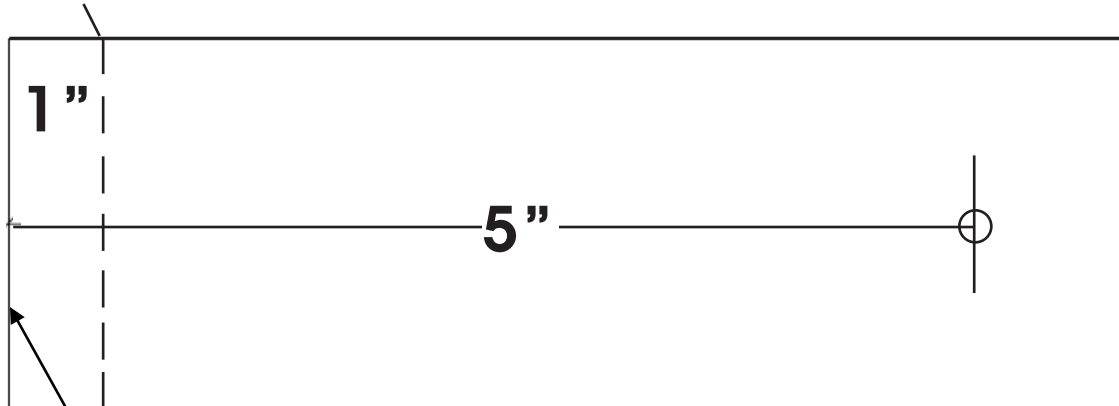

End of Panel


Template for PGH Holder

Panel Glass Holder (PGH) Installation

WARNING! PGH screens must be tightened by hand.
Plexiglass and glass are subject to cracking and breaking if power tools are used.



Panel Plan View

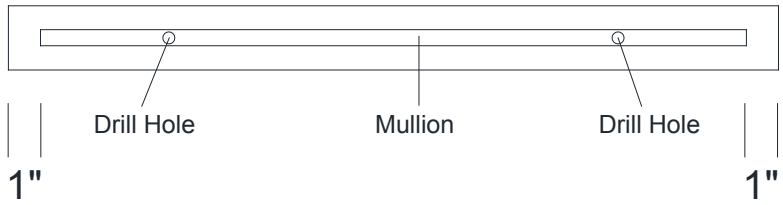

Please use the below diagram drill hole locations when installing standard PGH mullions onto panels.

