

OPS2 Tile System Installation

Assembly Time:

Approximately 10 minutes per Tile Panel


Tools Needed:

None

Parts List:

Remove the parts from the box and verify they are all there.

***NOTE:** Parts will vary for each installation project. (This example shows a 67"H Tile Panel with 18" Perforated tiles on bottom, 14" Fabric stackers in the middle and a 14" Glass/Open tile on top.

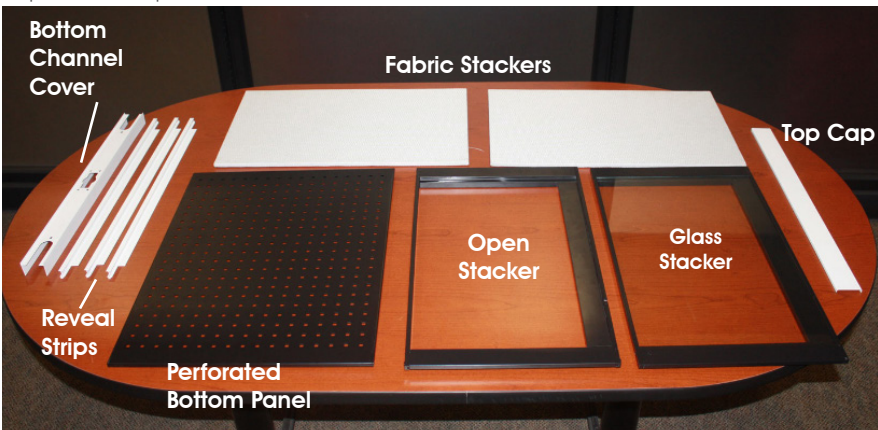

STEP 1

Place the bottom channel cover over the bottom of the panel frame.



STEP 2

Place the perforated bottom panel and put it on top of the cover plate, with the clip side down.

Place a reveal strip on top, with the thin side facing out.



STEP 3

Place the fabric stacker on top of the reveal strip with the "top" side up. This is marked on the tile.

Place the reveal strip on top, thin side facing out. Repeat step 3.



STEP 4

Place the glass stacker on top of the reveal strip and push into place.

Repeat steps 1 through 4 on the opposite side of the panel.

***NOTE:** Our standard for glass stackers is to have glass on one side and an open stacker on the other side.



STEP 5

Place the magnetic top cap on top of the panel to secure the stackers.

