

Upmount Installation


Assembly Time:

Approximately 10 minutes

Tools Needed:

- 9mm Wrench
- Phillips Screwdriver

Remove the parts from the box and verify they are all there.

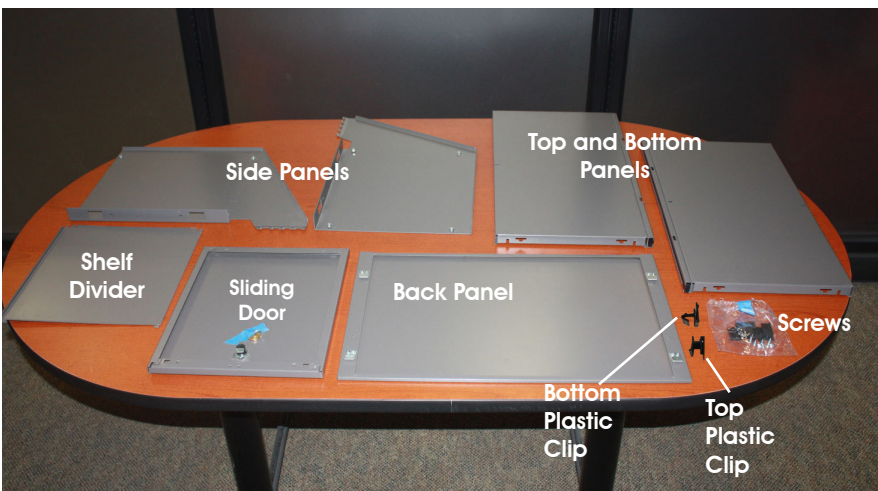

STEPS 1 & 2

Attach the side panels into the slot channel so that the back metal flap is just above the panel.

Attach the back panel, with the hooks facing down, into the square holes on the metal flap of the side panels.



STEPS 3 & 4

Using the 4 screws provided, secure the sides to the back panel.

Place the bottom panel onto the nuts already on the side panels. Loosen the nuts if the panel does not go in easily.



STEPS 5 & 6

Hand tighten nuts.

Attach the shelf divider using the tabs on the bottom in the provided grooves.



STEPS 7 & 8

Place the top panel onto the nuts already on the side panels. Loosen nuts if panel does not go on easily.

Hand tighten the nuts on the top.



STEPS 9 & 10

Using your 9 mm wrench, completely tighten the top and bottom nuts.

Assemble the door using the plastic clips. The 2 hooked clips clip into the bottom and the 2 straight clips go into the top.



STEP 11

Push the door into the grooves on the top and bottom panels until you hear them click.

