


INSTALLATION GUIDE FOR MULLION PLACEMENT

NOTE: Should be printed at 100% scale for accurate measurement to outside holes.

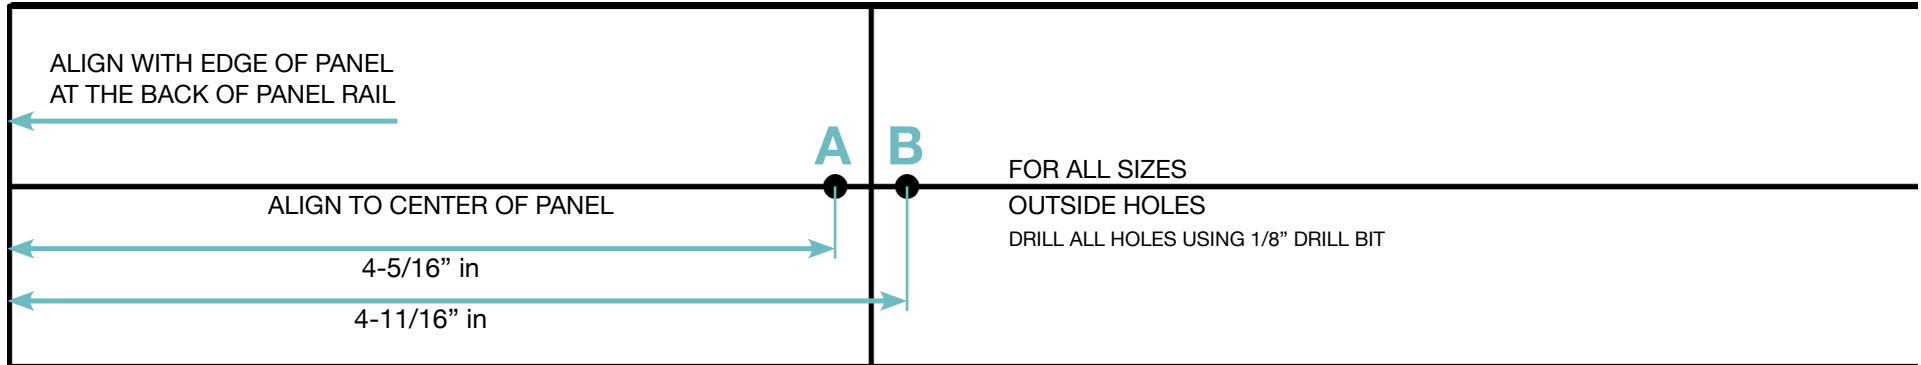

HOW TO USE THIS GUIDE:

FOR 24", 30", 36" 42" AND 48" MULLIONS:

- For all mullion sizes, use the drawing above (scaled to correct size) for accurate placement of the outside holes to drill on both sides of the panel.
- Simply align the edge of the drawing with either panel end to find the accurate hole placement.
- Drill holes using 1/8" drill bit.

FOR 60" AND 72" MULLIONS:

- For all mullion sizes, use the drawing above (scaled to correct size) for accurate placement of the outside holes to drill on both sides of the panel.
- Simply align the edge of the drawing with either panel end to find the accurate hole placement.
- Drill holes using 1/8" drill bit

FOR 60" AND 72" MULLIONS, CENTER HOLES MUST ALSO BE DRILLED:

- For 60" mullion center holes, repeat each step from both panel edges:
 - Measure 20" from **OUTSIDE HOLE A** for **CENTER HOLE A**
 - Measure 20" from **OUTSIDE HOLE B** for **CENTER HOLE B**
- For 72" mullion center holes, repeat each step from both panel edges:
 - Measure 26" from **OUTSIDE HOLE A** for **CENTER HOLE A**
 - Measure 26" from **OUTSIDE HOLE B** for **CENTER HOLE B**

REFERENCE (not to scale)

